

HANDLES system variable

1606 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1002

Function Description:

The **HANDLES** system variable is used to report whether object handles could be accessed by application programs.

(Read-Only)

Type : Integer

Saved in : Drawing

Initial value : on

This system variable is only used to keep the integrity of scripts.

Online URL: <https://www.gstarcad.com.my/knowledge/article/handles-system-variable-1606.html>