

## **HIDEPRECISION system variable**

1608 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 969

### **Function Description:**

The **HIDEPRECISION** system variable is used to control the precision of hides and shades.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : single precision, takes less memory

**1** : double precision, takes more memory

Online URL: <https://www.gstarcad.com.my/knowledge/article/hideprecision-system-variable-1608.html>