

HIDETEXT system variable

1609 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 913

Function Description:

The **HIDETEXT** system variable is used to specify whether to deal with text objects created by TEXT or MTEXT command when executing HIDE command.

Type : Parameter

Saved in : Drawing

Initial value : on

System Variable Value:

On : do not hide text and other objects

Off : hide text but display other objects

Online URL: <https://www.gstarcad.com.my/knowledge/article/hidetext-system-variable-1609.html>