

## **HIDETEXT system variable**

1609 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 939

### **Function Description:**

The **HIDETEXT** system variable is used to specify whether to deal with text objects created by TEXT or MTEXT command when executing HIDE command.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : on

### **System Variable Value:**

**On** : do not hide text and other objects

**Off** : hide text but display other objects

Online URL: <https://www.gstarcad.com.my/knowledge/article/hidetext-system-variable-1609.html>