

HPANG system variable

1611 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1139

Function Description:

The **HPANG** system variable is used to set the angle of new hatch pattern,

Type : Integer

Saved in : Not saved

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpang-system-variable-1611.html>