

## **HPANG system variable**

1611 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1141

### **Function Description:**

The **HPANG** system variable is used to set the angle of new hatch pattern,

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpang-system-variable-1611.html>