

## **HPBOUND system variable**

1614 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1026

### **Function Description:**

The **HPBOUND** system variable is used to control types of objects created by HATCH and BOUNDARY commands.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : create regions

**1** : create polylines

It will create polylines when the HPBOUNDRETAIN system variable is on.

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpbound-system-variable-1614.html>