

HPBOUND system variable

1614 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1054

Function Description:

The **HPBOUND** system variable is used to control types of objects created by HATCH and BOUNDARY commands.

Type : Integer

Saved in : Not saved

Initial value : 1

Range : 0,1

System Variable Value:

0 : create regions

1 : create polylines

It will create polylines when the HPBOUNDRETAIN system variable is on.

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpbound-system-variable-1614.html>