

HPBOUNDRETAIN system variable

1615 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 911

Function Description:

The **HPBOUNDRETAIN** system variable is used to whether to create new boundary objects for new hatch pattern and fill.

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : do not create boundary objects

1 : create boundary objects according to HPBOUND system variable

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpboundretain-system-variable-1615.html>