

HPCOLOR system variable

1616 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1064

Function Description:

The **HPCOLOR** system variable is used to set the default color for new hatch pattern.

Type : Strings

Saved in : Drawing

Initial value : Current value

Valid value including:

"." is used to apply current color set in CECOLOR system variable ByLayer or ByBlock

Index Color: an integer between 1 and 255, or color name of the front seven colors

True Color: a RGB or HSL value between 000 and 255, the format is "RGB:000,000,000"

Color Books: standard color system, wizard, and set text.

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpcolor-system-variable-1616.html>