

## **HPCOLOR system variable**

1616 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1053

### **Function Description:**

The **HPCOLOR** system variable is used to set the default color for new hatch pattern.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : Current value

Valid value including:

"." is used to apply current color set in CECOLOR system variable ByLayer or ByBlock

Index Color: an integer between 1 and 255, or color name of the front seven colors

True Color: a RGB or HSL value between 000 and 255, the format is "RGB:000,000,000"

Color Books: standard color system, wizard, and set text.

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpcolor-system-variable-1616.html>