

## **HPDOUBLE system variable**

1617 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 907

### **Function Description:**

The **HPDOUBLE** system variable is used to specify double hatch patterns for custom defined patterns.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

The double hatch pattern specifies a second set of lines drawn at 90 degrees with original line.

### **System Variable Value:**

**0** : turn off double hatch pattern

**1** : turn on double hatch pattern

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpdouble-system-variable-1617.html>