

## **HPGAPTOL system variable**

1619 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1364

### **Function Description:**

The **HPGAPTOL** system variable is used to treat a set of objects or a closed region as a closed hatch boundary.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0.0000

**Range** : 0 ~ 5000

The **HPGAPTOL** system variable could specify a region without a gap. The default value is 0. Entering a value by drawing unit to set the maximum gap that can be ignored when selecting objects to be hatch boundaries.

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpgaptol-system-variable-1619.html>