

## **HPINHERIT system variable**

1620 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 984

### **Function Description:**

The **HPINHERIT** system variable is used to control whether to inherit the hatch origin when using the Inherit Properties option in HATCH and HATCHEDIT.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : the origin of hatch is gotten by HPORIGN

**1** : the origin of hatch is gotten hatch objects

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpinherit-system-variable-1620.html>