

HPINHERIT system variable

1620 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1017

Function Description:

The **HPINHERIT** system variable is used to control whether to inherit the hatch origin when using the Inherit Properties option in HATCH and HATCHEDIT.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : the origin of hatch is gotten by HPORIGN

1 : the origin of hatch is gotten hatch objects

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpinherit-system-variable-1620.html>