

## **HPMAXLINES system variable**

1622 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 872

### **Function Description:**

The **HPMAXLINES** system variable is used to set the maximum of hatch lines generated when hatching.

**Type** : Real

**Saved in** : Registry

**Initial value** : 300000

**Range** : 10 ~ 10000000

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpmaxlines-system-variable-1622.html>