

HPORIGIN system variable

1624 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 843

Function Description:

The **HPORIGIN** system variable is used to set hatch origin for new hatches in current UCS.

Type : 2D point

Saved in : Drawing

Initial value : 0.0000,0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/hporigin-system-variable-1624.html>