

HPSCALE system variable

1626 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1168

Function Description:

The **HPSCALE** system variable is used to set the hatch scale factors.

Type : Real

Saved in : Not saved

Initial value : 1.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpscale-system-variable-1626.html>