

## **HPSCALE system variable**

1626 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1139

### **Function Description:**

The **HPSCALE** system variable is used to set the hatch scale factors.

**Type** : Real

**Saved in** : Not saved

**Initial value** : 1.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpscale-system-variable-1626.html>