

## **HPSEARATE system variable**

1627 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 821

### **Function Description:**

The **HPSEARATE** system variable is used to control whether to create a single hatch object or create separated hatch objects when hatch several closed boundaries.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : create a single hatch object

**1** : create separated hatch objects

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpsearate-system-variable-1627.html>