

HPSPACE system variable

1628 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 945

Function Description:

The **HPSPACE** system variable is used to set the hatch space for custom hatch patterns.

Type : Real

Saved in : Not saved

Initial value : 1.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/hpspace-system-variable-1628.html>