

## **HYPERLINKBASE system variable**

1629 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 877

### **Function Description:**

The **HYPERLINKBASE** system variable is used to specify the path used for all relative hyperlinks in the drawing.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

If no value is specified, the drawing path will be used for all relative hyperlinks.

Online URL: <https://www.gstarcad.com.my/knowledge/article/hyperlinkbase-system-variable-1629.html>