

HYPERLINKBASE system variable

1629 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 874

Function Description:

The **HYPERLINKBASE** system variable is used to specify the path used for all relative hyperlinks in the drawing.

Type : Strings

Saved in : Drawing

Initial value : ""

If no value is specified, the drawing path will be used for all relative hyperlinks.

Online URL: <https://www.gstarcad.com.my/knowledge/article/hyperlinkbase-system-variable-1629.html>