

IMPLIEDFACE system variable

1632 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1025

Function Description:

The **IMPLIEDFACE** system variable is used to control the detection of implied faces.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : implied faces could not be detected

1 : implied faces could be detected

The implied face is a closed region, it could be created by intersected overlapped faces of 3D solids. This variable must be set to 1 if you want to select and modify implied faces.

Online URL: <https://www.gstarcad.com.my/knowledge/article/impliedface-system-variable-1632.html>