

## **INDEXCTL system variable**

1633 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 876

### **Function Description:**

The **INDEXCTL** system variable is used to control whether to create layer and space index and save them to drawing files.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2,3

### **System Variable Value:**

**0** : do not create index

**1** : create layer index

**2** : create space index

**3** : create layer index and space index

Online URL: <https://www.gstarcad.com.my/knowledge/article/indexctl-system-variable-1633.html>