

# **INPUTHISTORYMODE system variable**

1635 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1028

## **Function Description:**

The **INPUTHISTORYMODE** system variable is used to control the content and location of users 'input history.

**Type** : Bitcode

**Saved in** : Registry

**Initial value** : 15

**Range** : 0 ~ 15

## **System Variable Value:**

**0** : do not display input history

**1** : display recent input history in command line or at dynamic prompts. Users could access input history in command line or at dynamic prompts by pull-down arrowhead or pull-up arrowhead.

**2** : display recent input history record of current command in shortcut menu of "recent input

**4** : display all recent input history record of all commands in current task in shortcut menu of "recent input"

**8** : display location mark of recent input point. Specify point location by arrowhead at command prompts

Online URL:

<https://www.gstarcad.com.my/knowledge/article/inputhistorymode-system-variable-1635.html>