

INPUTHISTORYMODE system variable

1635 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1008

Function Description:

The **INPUTHISTORYMODE** system variable is used to control the content and location of users 'input history.

Type : Bitcode

Saved in : Registry

Initial value : 15

Range : 0 ~ 15

System Variable Value:

0 : do not display input history

1 : display recent input history in command line or at dynamic prompts. Users could access input history in command line or at dynamic prompts by pull-down arrowhead or pull-up arrowhead.

2 : display recent input history record of current command in shortcut menu of ""recent input

4 : display all recent input history record of all commands in current task in shortcut menu of "recent input"

8 : display location mark of recent input point. Specify point location by arrowhead at command prompts

Online URL:

<https://www.gstarcad.com.my/knowledge/article/inputhistorymode-system-variable-1635.html>