

INSUNITSDEFTARGET system variable

1640 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 949

Function Description:

The **INSUNITSDEFTARGET** system variable is used to set the target drawing unit value when the INSUNITS system variable set to be 0.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0 ~ 20

System Variable Value:

0 : unspecified(no units)

1 : inches

2 : feet

3 : miles

4 : millimeters

5 : centimeters

6 : meters

7 : kilometers

8 : micro inches

9 : mils

10 : yards

11 : angstroms

12 : nanometers

13 : microns

14 : decimeters

15 : dekameters

16 : hectometers

17: gigameters

18: astronomical units

19: light years

20: parsecs

Online URL:

<https://www.gstarcad.com.my/knowledge/article/insunitsdeftarget-system-variable-1640.html>