

## **INTELLIGENTUPDATE system variable**

1641 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 990

### **Function Description:**

The **INTELLIGENTUPDATE** system variable is used to control the graphic refresh rate.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 20

The default value is 20 frames per second. If confronting some problems about generating drawings or timing, users could set it to be 0 to turn it off. The **INTELLIGENTUPDATE** system variable is used to stop drawings updating until timer expired. The timer will be reset in the subsequent update.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/intelligentupdate-system-variable-1641.html>