

INTERFERECOLOR system variable

1642 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 932

Function Description:

The **INTERFERECOLOR** system variable is used to control the color of interference objects.

Type : Strings

Saved in : Drawing

Initial value : 1

The valid value could be "**BYLAYER**", "**BYBLOCK**", color name, and an integer from 0 to 255.

The valid value of true color is an integer strings with a RGB in front. Each integer is separated by a comma. It is input in the following way: RGB:000,000,000 .

Online URL: <https://www.gstarcad.com.my/knowledge/article/interfericolor-system-variable-1642.html>