

## **INTERFEREOBJVS system variable**

1643 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1031

### **Function Description:**

The **INTERFEREOBJVS** system variable is used to set the visual style for interference objects.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : Real

The **INTERFEREOBJVS** system variable could only set the visual style to save in a drawing.

Users could not use the **PURGE** command to delete the visual style specified by **INTERFEREOBJVS** system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/interfereobjvs-system-variable-1643.html>