

INTERFEREOBJVS system variable

1643 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1028

Function Description:

The **INTERFEREOBJVS** system variable is used to set the visual style for interference objects.

Type : Strings

Saved in : Drawing

Initial value : Real

The **INTERFEREOBJVS** system variable could only set the visual style to save in a drawing.

Users could not use the **PURGE** command to delete the visual style specified by **INTERFEREOBJVS** system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/interfereobjvs-system-variable-1643.html>