

## **INTERFEREVPVS system variable**

1644 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 835

### **Function Description:**

The **INTERFEREVPVS** system variable is used to specify the visual style when checking interference objects.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : Frame

The **INTERFEREOBJVS** system variable could only set the visual style to save in a drawing. Users could not use the PURGE command to delete the visual style specified by INTERFEREOBJVS system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/interfervpvs-system-variable-1644.html>