

INTERFEREVPVS system variable

1644 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 840

Function Description:

The **INTERFEREVPVS** system variable is used to specify the visual style when checking interference objects.

Type : Strings

Saved in : Drawing

Initial value : Frame

The **INTERFEREOBJVS** system variable could only set the visual style to save in a drawing.

Users could not use the PURGE command to delete the visual style specified by INTERFEREOBJVS system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/interferenvps-system-variable-1644.html>