

INTERSECTIONDISPLAY system variable

1646 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 965

Function Description:

The **INTERSECTIONDISPLAY** system variable is used to control the display of intersection edges in current viewport.

Type : Parameter

Saved in : Drawing

Initial value : 0

Range : 0,1

Note: the **INTERSECTIONCOLOR** system variable controls the intersection polyline color only in 2D frame visual style.

System Variable Value:

0 :off

1 :on

Online URL:

<https://www.gstarcad.com.my/knowledge/article/intersectiondisplay-system-variable-1646.html>