

## **ISAVEBAK system variable**

1647 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1113

### **Function Description:**

The **ISAVEBAK** system variable is used to increase the speed of incremental saves, especially for large drawings.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

The **ISAVEBAK** system variable is used to control creation of bak files.

### **System Variable Value:**

**0** : do not create BAK files (the same as fully save)

**1** : create BAK files

Note: in some situations(such as power failure when saving), some drawing date may missing.

Online URL: <https://www.gstarcad.com.my/knowledge/article/isavebak-system-variable-1647.html>