

## **ISOLINES system variable**

1649 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 900

### **Function Description:**

The **ISOLINES** system variable is used to specify the number of contour lines displayed on the curved surfaces of 3D solids.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 4

**Range** : 0 ~ 2047

Online URL: <https://www.gstarcad.com.my/knowledge/article/isolines-system-variable-1649.html>