

ISOLINES system variable

1649 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 902

Function Description:

The **ISOLINES** system variable is used to specify the number of contour lines displayed on the curved surfaces of 3D solids.

Type : Integer

Saved in : Drawing

Initial value : 4

Range : 0 ~ 2047

Online URL: <https://www.gstarcad.com.my/knowledge/article/isolines-system-variable-1649.html>