

## **LASTANGLE system variable**

1650 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 932

### **Function Description:**

The **LASTANGLE** system variable is used to store the ending tangent angle of last inputted arc, line, or polyline relative to XY plane in current UCS.

(Read-Only)

**Type** : Real

**Saved in** : Not saved

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/lastangle-system-variable-1650.html>