

LASTPOINT system variable

1651 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1055

Function Description:

The **LASTPOINT** system variable is used to store the last specified point in current UCS.

Type : 3D point

Saved in : Not saved

Initial value : 0.0000,0.0000,0.0000

Users could specify the last point by inputting @ symbol for reference at command prompts.

Online URL: <https://www.gstarcad.com.my/knowledge/article/lastpoint-system-variable-1651.html>