

## **LASTPOINT system variable**

1651 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1066

### **Function Description:**

The **LASTPOINT** system variable is used to store the last specified point in current UCS.

**Type** : 3D point

**Saved in** : Not saved

**Initial value** : 0.0000,0.0000,0.0000

Users could specify the last point by inputting @ symbol for reference at command prompts.

Online URL: <https://www.gstarcad.com.my/knowledge/article/lastpoint-system-variable-1651.html>