

## **LASTPROMPT system variable**

1652 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 972

### **Function Description:**

The **LASTPROMPT** system variable is used to store the last string to echo to the command prompt.  
(Read-Only)

**Type** : Strings

**Saved in** : Not saved

**Initial value** : ""

This string is the same as the last line seen at the Command prompt and includes any user input

Online URL: <https://www.gstarcad.com.my/knowledge/article/lastprompt-system-variable-1652.html>