

LATITUDE system variable

1653 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 878

Function Description:

The **LATITUDE** system variable is used to specify the latitude of geography mark.
(Read-Only)

Type : Real

Saved in : Drawing

Initial value : 37.795

Range : -90 ~ 90

Online URL: <https://www.gstarcad.com.my/knowledge/article/latitude-system-variable-1653.html>