

## **LATITUDE system variable**

1653 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 861

### **Function Description:**

The **LATITUDE** system variable is used to specify the latitude of geography mark.  
(Read-Only)

**Type** : Real

**Saved in** : Drawing

**Initial value** : 37.795

**Range** : -90 ~ 90

Online URL: <https://www.gstarcad.com.my/knowledge/article/latitude-system-variable-1653.html>