

LAYEREVAL system variable

1654 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1020

Function Description:

The **LAYEREVAL** system variable is used to control whether to evaluate the layer list for new layers when added to the drawing or to attached xrefs.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2

System Variable Value:

0 : off

1 : detect when to add new layers of xrefs to the drawing

2 : detect when to add new layers to the drawing and xrefs

Note: if specified the **LAYEREVALCTL** system variable to be 0, the settings of **LAYEREVAL** and **LAYERNOTIFY** will be ignored.

Online URL: <https://www.gstarcad.com.my/knowledge/article/layereval-system-variable-1654.html>