

## **LAYEREVAL system variable**

1654 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1064

### **Function Description:**

The **LAYEREVAL** system variable is used to control whether to evaluate the layer list for new layers when added to the drawing or to attached xrefs.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

### **System Variable Value:**

**0** : off

**1** : detect when to add new layers of xrefs to the drawing

**2** : detect when to add new layers to the drawing and xrefs

Note: if specified the **LAYEREVALCTL** system variable to be 0, the settings of **LAYEREVAL** and **LAYERNOTIFY** will be ignored.

Online URL: <https://www.gstarcad.com.my/knowledge/article/layereval-system-variable-1654.html>