

## **LAYERMANAGERSTATE system variable**

1657 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 998

### **Function Description:**

The **LAYERMANAGERSTATE** system variable is used to specify whether the layer property manager is on or off.

(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : Unknown

**Range** : 0,1

### **System Variable Value:**

**0** : off

**1** : on

Online URL:

<https://www.gstarcad.com.my/knowledge/article/layermanagerstate-system-variable-1657.html>