

LIGHTGLYPHDISPLAY system variable

1663 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 781

Function Description:

The **LIGHTGLYPHDISPLAY** system variable is used to control the display of light glyphs.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1

The light glyphs is symbols for point light and spotlight.

System Variable Value:

0 :off

1 :on

Online URL:

<https://www.gstarcad.com.my/knowledge/article/lightglyphdisplay-system-variable-1663.html>