

## **LIGHTLISTSTATE system variable**

1665 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 974

### **Function Description:**

The **LIGHTLISTSTATE** system variable is used to specify whether the "light in model" dialog box is open or closed.

(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** :off

**1** :on

Online URL: <https://www.gstarcad.com.my/knowledge/article/lightliststate-system-variable-1665.html>