

## LIMCHECK system variable

1667 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 827

### Function Description:

The **LIMCHECK** system variable is used to control whether it is allowed to create objects beyond grid limits.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

When this system variable is off, the light in block has no effect on 3D objects rendering in current viewport.

### System Variable Value:

**0** : it is allowed to create objects beyond grid limits

**1** : it is not allowed to create objects beyond grid limits

Online URL: <https://www.gstarcad.com.my/knowledge/article/limcheck-system-variable-1667.html>